





SKF PULSE APP – HOW IT WORKS

SKF Pulse App – How to get started

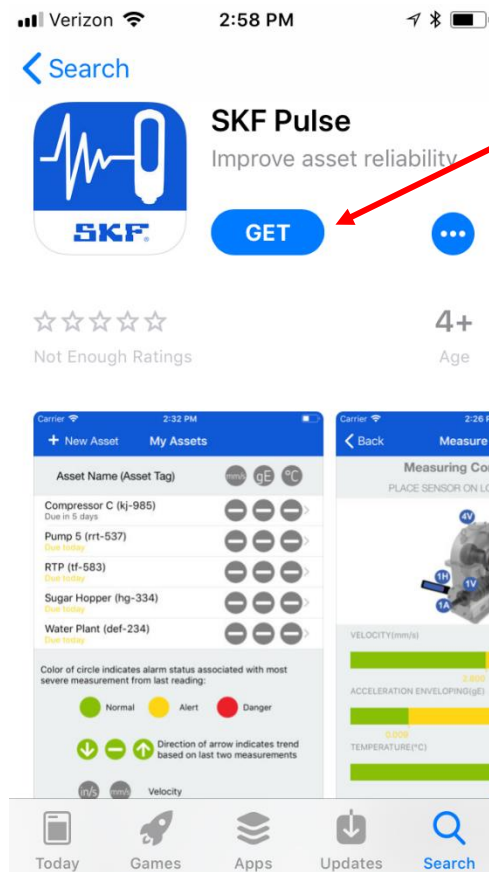


Download SKF Pulse from the [App Store](#) or [Google Play](#)

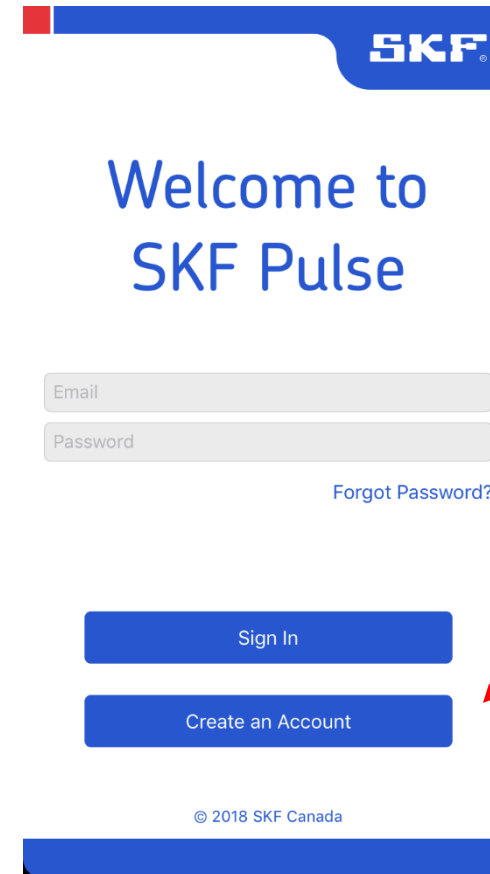

Create an account


SKF Pulse App - Settings

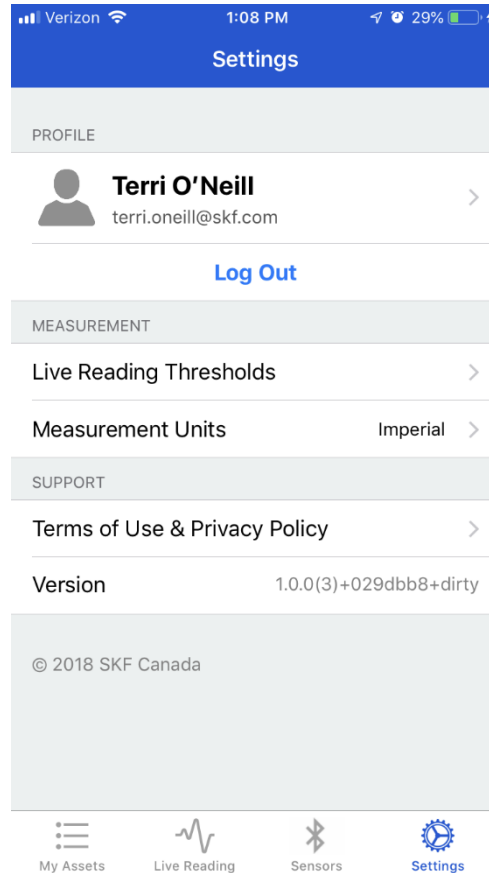


In Settings:

- Edit your profile
- Configure thresholds for Live Readings
- Set preferences for measurement units

SKF Pulse App – Live Readings

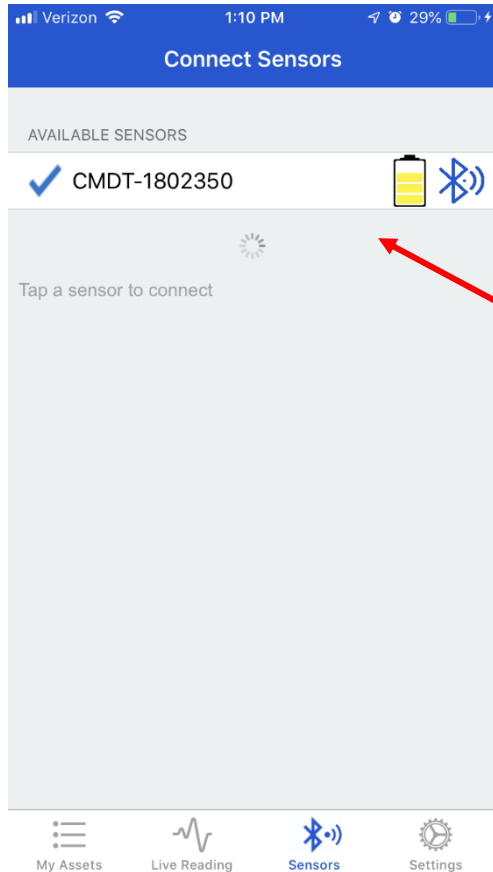


Tap to connect to sensor

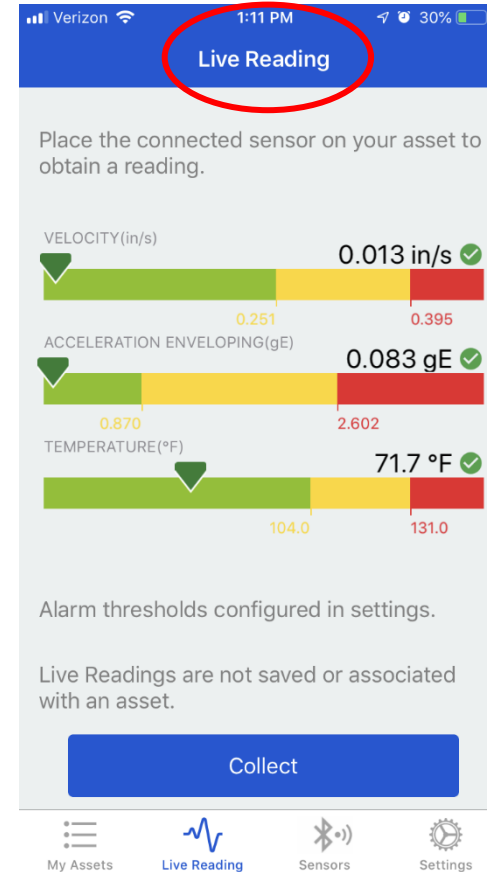

Live readings are designed for quick check of machine status.

Machine data is not saved.

SKF Pulse App – My Assets

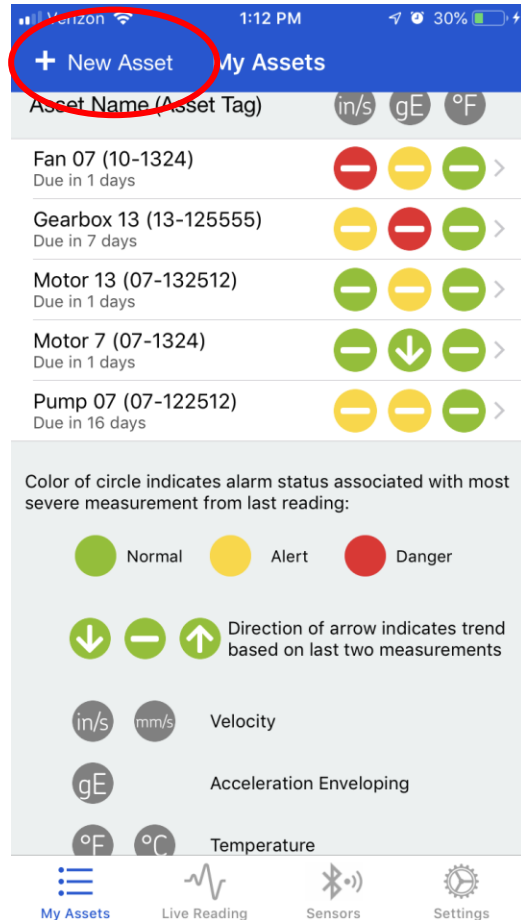

Create new asset

Enter all appropriate asset information, some fields are optional.

Detailed asset information will facilitate analysis and ensure more accurate recommended corrective actions.

Photos provide visual identification of assets.

SKF Pulse App – My Assets

Verizon 1:41 PM 39%

< Back New Asset Next

0.251 0.395
ACCELERATION ENVELOPING(gE)

0.249 0.745
TEMPERATURE(°F)

104.0 131.0

ISO VELOCITY THRESHOLDS

Machine Size* Medium >

Flexibility* Flexible >

CALCULATED GE THRESHOLDS

Bearing Bore Size Units mm

Bearing Bore Size* 5.000 mm

Max Operating Speed* 700 rpm

Asset thresholds
are configured
based on the data
entered

Asset info can be
edited at a later date
if required.

Verizon 1:41 PM 39%

< Back New Asset Next

ALARM THRESHOLDS

VELOCITY(in/s)

0.251 0.395

0.249 0.745
ACCELERATION ENVELOPING(gE)

TEMPERATURE(°F)

104.0 131.0

CUSTOM THRESHOLDS

Custom Thresholds ☒

VELOCITY ALARM THRESHOLDS

Alert* 0.251 in/s

Danger* 0.395 in/s

ACCELERATION ENVELOPING ALARM THRESHOLDS

Alert* 0.249 gE

Default is ISO
standards, but the
thresholds can be
customized if
desired.

SKF Pulse App – My Assets

Verizon 2:21 PM 52%

Back New Asset Next

BEARING 1 INFO

Manufacturer SKF

Bearing Designation 6310

Installation Date 07-01-2015

BEARING 2 INFO

Manufacturer Select

Bearing Designation (Optional)

Installation Date (Optional)

BEARING 3 INFO

Manufacturer Select

Enter bearing designation to ensure the most accurate analysis

Verizon 2:22 PM 52%

Back New Asset Save

COLLECTION

Asset Connection* Direct Coupling

COLLECTION FREQUENCY

Collection Every* 1 Days

COLLECTION POINTS

Point 1H Enabled

Point 1V Disabled

Point 1A Enabled

Point 4H Enabled

Enter connection type


Enter collection frequency

Enable or disable collection points

SKF Pulse App – Measure Asset




Measure the asset to save machine data for potential future analysis

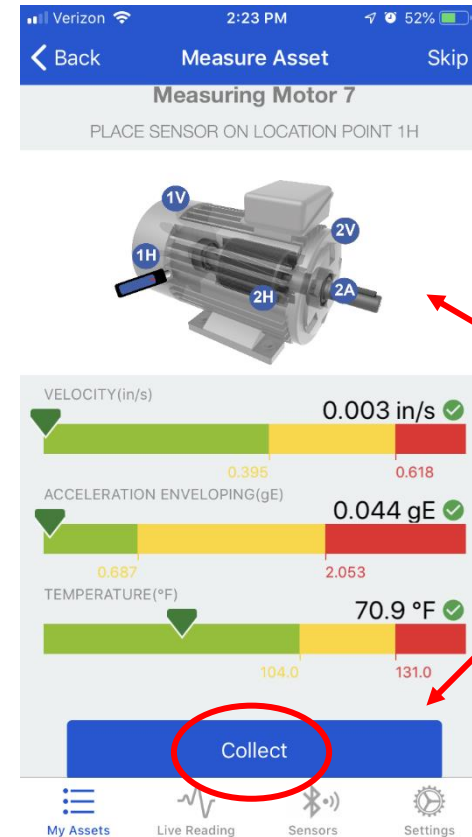


Collect measurement for all points

SKF Pulse App – Pulse Checks

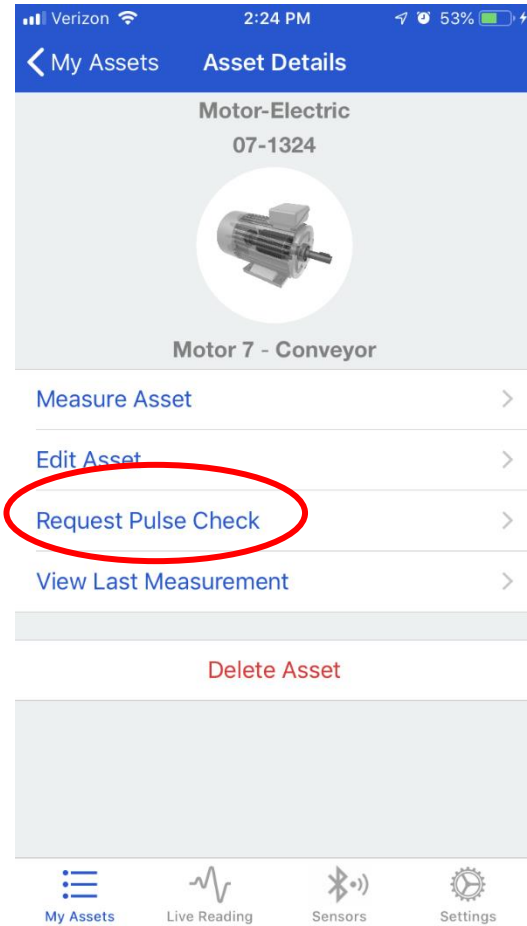

For expert analysis and advice, request an SKF Pulse Check

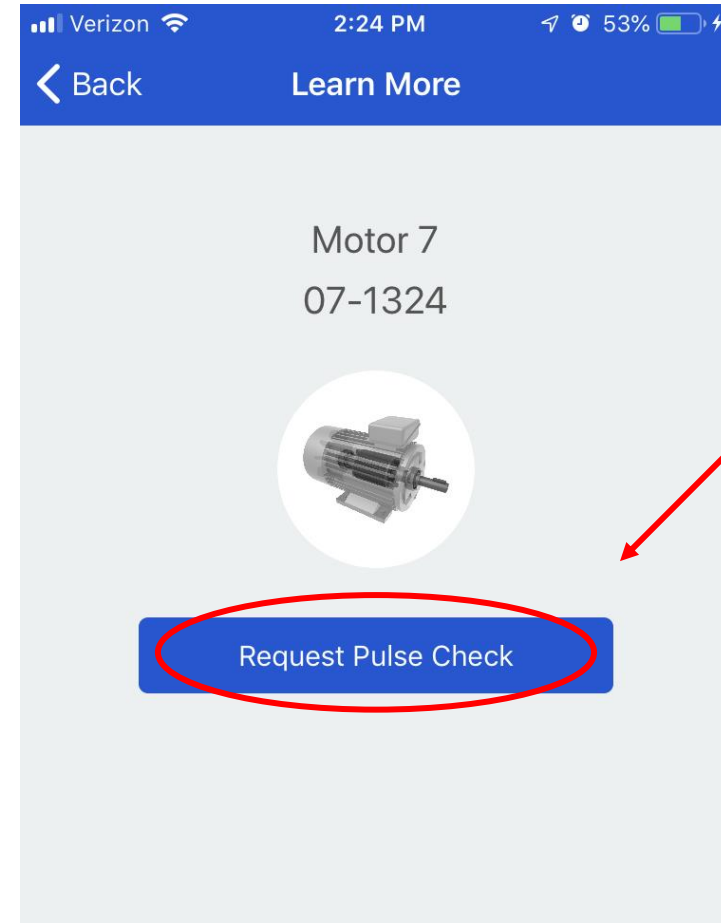

SKF Pulse Check reports provide expert diagnostics within one business day

SKF®